


### IMPORTANT

Special attention is required if trimming these doors to size as the groove detail can be damaged while planing the edges. To maintain the grain effect the timber goes straight through the edge lipping. Care must be taken to cut into the face of the grooved timber insert to create a break point before the edges are planed.

Below we show you how. Before proceeding please ensure all your tools are *sharp*.

#### Step 1

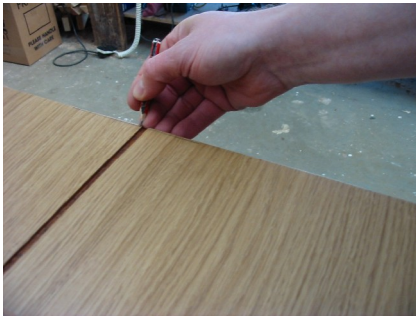

Mark the edge of the door where you will be planing.

#### Step 2




Cut into the face of the door where your mark is. This is where you will plane to, ensuring that you do not go past this cut. This needs to be done on *every* groove on *both* sides.

#### Step 3



Plane the door edge using a cut of ½mm or less until you are at your mark and cut.

#### Step 4

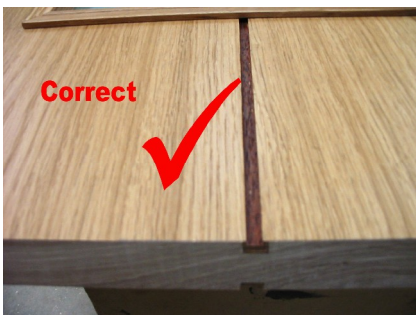

Planed correctly up to your mark with no breakage.



This breakage is caused when the above guidelines are NOT followed and we will not accept liability should you damage your door in this way.